

tizi




TANKSTATION **4x** ***MEGA***

TOPLOADER

Step-by-step installation guide

www.tizi.tv

The tizi Tankstation 4x MEGA Toploader comes as a DIY kit and can be built into almost any piece of furniture. For installation into furniture, a drill or an electric screwdriver with a hole saw attachment 2 inches or 2 3/8 inches is required.

Before you begin, take a look at our Quick Start Guide which you will find in the box along with your Toploader. Here you will find useful tips to help you embed the device. Watch our tutorial video to [see the whole installation in action](#). 



Checklist - you'll need:

- Drill or screwdriver
- Hole saw 2 inches or 2 3/8 inches
- Pen and ruler for marking
- Masking tape and sandpaper
- Double-sided tape



1

Find the right spot

Think about desk ergonomics. Are you right-handed? Then a spot in the upper left corner is ideal so charging devices won't get in the way of your movements.



2

Tape the surface to be drilled


Before you start with the drilling, be sure to tape the area around the "hole to be" in order to prevent any damage to the surface of your furniture.



3

Measure the drilling area

Mark out the hole you're going to drill. You should leave at least 6 inches from the edges of ordinary furniture and 2 1/2 inches from the edge of a desk.

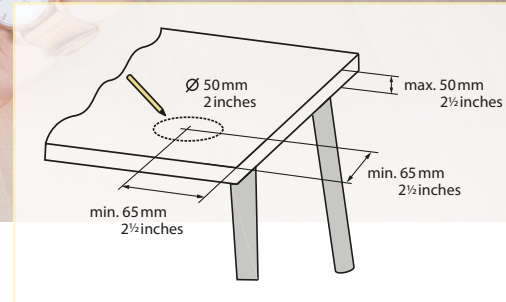

4

Drill the hole

To drill a 2 inch hole, you'll need a hole saw attachment for your drill or electric screwdriver with a 2 inch circumference.

TIP

Your hole saw is easier to handle if you drill an ordinary hole first.



5

Insert the adapter ring

Smooth out the corners of the hole with sandpaper before inserting the right Toploader adapter ring.

BETTER FIT

Put double sided sticky tape around the edge of the ring to give it a better hold.



6

Plug in the power & devices

Insert the Toploader with the USB ports facing up. Next plug in the power cable underneath into the Toploader device. After that you can finally connect your USB devices.

DON'T FORGET!

Pull the protective foil off to make the Toploader look perfect.

